



Step 12 – KSE PRINT HEAD – S10163


1. Open the head bracket.

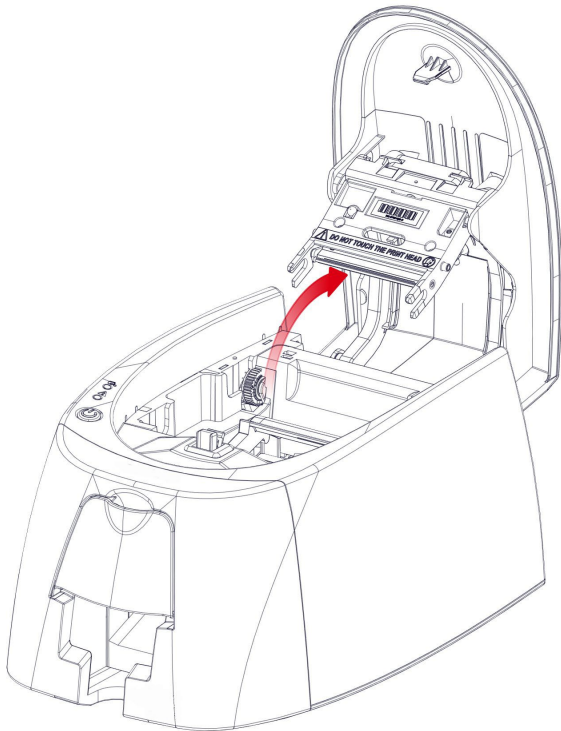


2. Press on the beam of the head bracket to compress the springs.

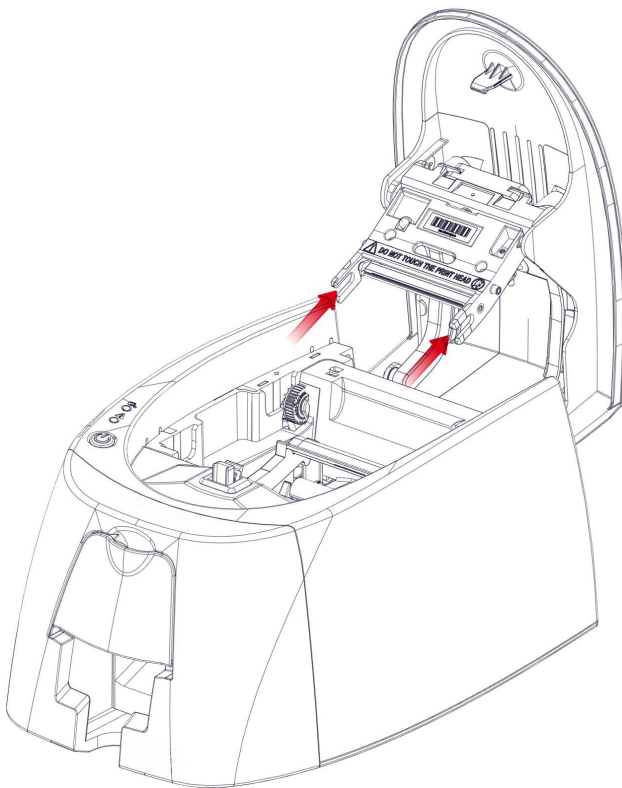

3. Pivot the head backward to remove it from the guides.

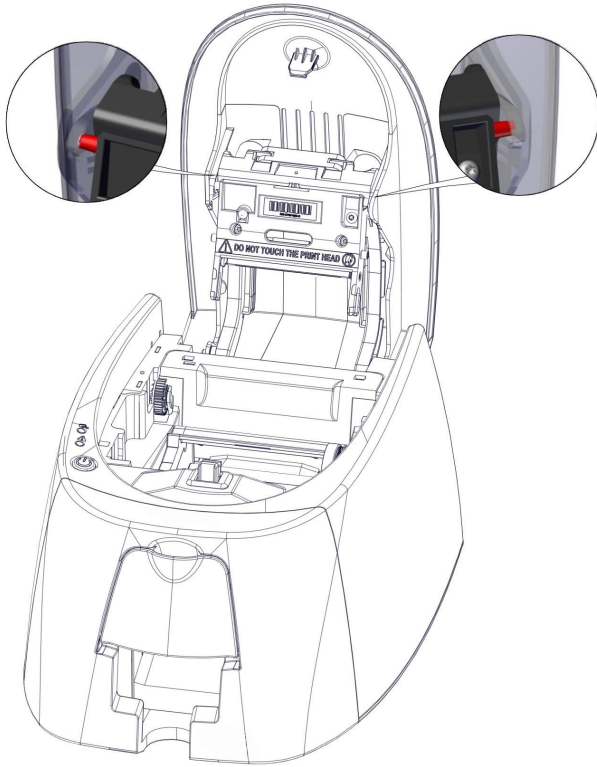

4. Unplug the print head cables.

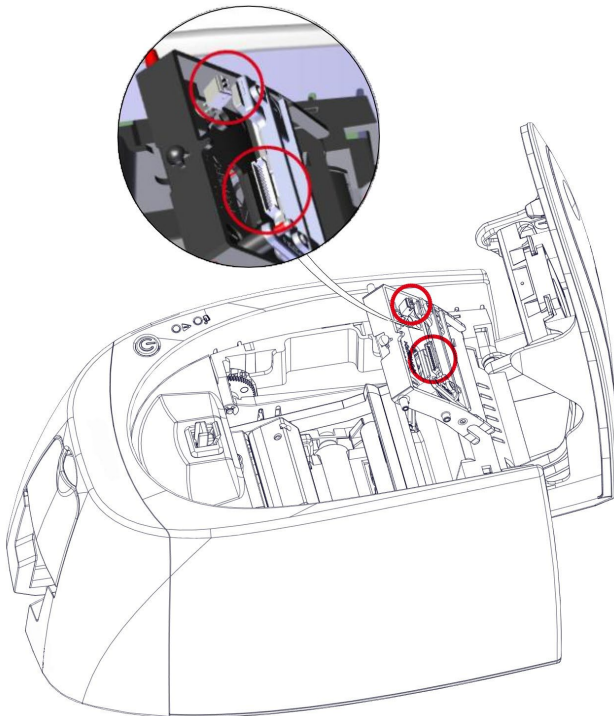


5. Carry out the steps in reverse order to refit the new print head.
6. To configure the new print head, see section [Replacing the Print Head \(page 79\)](#).

REPLACING THE PRINT HEAD

Carry out the replacement procedure [Step 12 – KSE PRINT HEAD \(page 49\)](#).

Configure the new print head:

- a) Start the printer and check whether it is connected to a computer on which the Edikio Print Center is installed.
- b) In the Edikio Print Center Maintenance tab, click on Change Print Head.
- c) Enter the PKN no., the print head serial number, then confirm.
- d) Carry out [Routine Printer Cleaning \(page 63\)](#) as well as [Print Head Cleaning \(page 65\)](#).

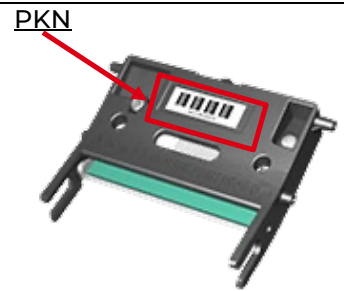

Or

- Configure the print head kit no.: see the section [Printer Commands \(page 73\)](#).
- Carry out [Routine Printer Cleaning \(page 63\)](#) as well as [Print Head Cleaning \(page 65\)](#).



If the print head kit number is not entered correctly, malfunctions may occur. Failure to observe the installation instructions of the print head will invalidate the warranty.